STAFF QUICK GUIDE

MAX-LOCK PHONE BAG

USAGE AND CARE INSTRUCTIONS

The **Generation Faraday™ Max-Lock Phone Bag** blocks all wireless signal once a phone is sealed inside. Use this page for daily use, on-the-spot lock fixes, and shielding care.

SUPERCYCLE+™ Built to survive open-and-close usage cycles 2K+ times, to last a student's 4 year enrollment.

DAILY USE — WHAT STUDENTS DO


STEP 01



UNROLL THE TOP

Hold the bag upright and unroll the double-roll seal until the opening lies flat.

STEP 02

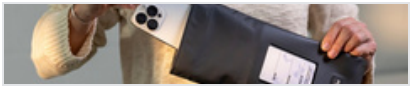

INSERT THE PHONE

The phone sits fully inside. Confirm no part of it rises above the opening.

STEP 03



LOCK IT SHUT

Re-roll the top, slide the latch into the lock, and press until it **clicks**. The bag is sealed.

TROUBLESHOOTING THE LOCK

BAG WON'T UNLOCK

1. Gently push down on the closed lock — this releases the pin.
2. Hold an unlocking device on the lock. An audible click means the pin retracted and the lock is free.

SHUT WITHOUT THE RING

Place a handheld key (GFUD-KEY) at the end of the lock's magnet and open the lock manually with your free hand.

Or open the bag upside down — hold it latch-down, unlock, let the flap hang free, then reinsert the latch before closing.

CLEANING & CARE

EXTERIOR

Mild soap and water. Wipe the outside with a damp cloth as needed.

INTERIOR

Shake the bag gently upside down to clear debris, then wipe with a dry, soft cloth.

Never use wet cloths or cleaning products inside — they disrupt the Faraday lining.



PRESERVE THE SHIELDING

Keep food, liquids, and debris out of the interior.

No chemicals, sprays, or disinfectants inside.

Never machine wash or submerge the bag.

Avoid excess moisture or scrubbing of the lining.

Still not working? Email support@generationfaraday.com, call 586-930-8085 (ET), or contact support.