GENERATION FARADAY
MADE BY MISSION DARKNESS

WALL & SURFACE MOUNTING

Unlock Dock: Installation Guide

SKU GFUD-DOCK · Estimated install time: 10 minutes per dock



What's in the box

- Unlock Dock with faceplate
- Tamperproof screws (pre-installed)
- L-shaped wrench for tamperproof screws

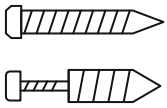

Mounting hardware not included; pick to suit your wall.

Tools you'll need

- Drill with bits and driver bits (wood or masonry)
- Pencil or marker, and a level
- Stud finder

Choose the right fasteners

Match hardware to your wall type; any hardware store can help.

SURFACE	WHAT TO USE	
Drywall or wood	**Wood screws into a stud** — find it with a stud finder. No stud? Use **drywall anchors and screws** instead.	
Brick or concrete	**Concrete screws** (Tapcon) or anchor plugs. Pre-drill with a hammer drill.	

⚠ **Before you drill:** check for wiring/plumbing and set a reachable height.

Questions on your rollout? We'll walk your team through it.

+1-805-764-4346 · support@generationfaraday.com · generationfaraday.com/get-in-touch

Installation steps

1 Remove the faceplate

Back out the tamperproof screws with the L-shaped wrench and lift off the faceplate. Keep both for step 5.

2 Mark the mounting holes

Hold the dock level and mark the 4 screw locations.

3 Drill pilot holes, if needed

Wood: small pilot hole. Masonry: hammer drill, carbide bit.

4 Secure the dock

Drive screws or anchors through the backplate's 4 holes and tighten securely.

5 Reattach the faceplate

Refit the faceplate and tighten the tamperproof screws.

6 Test the dock

Seat the bag against the magnet, then push inward to open.

Installing the accessories



GFUD-COVER

Tamper-Proof Cover

1. Peel the backing and press the cover onto a flat surface (adhesive holds during install only).
2. Remove the dock faceplate (step 1).
3. Line up the backplate and cover holes, then fasten through both into the wall.
4. Refit the faceplate (step 5).
5. Lock the door closed when not in use.



GFUD-STAND-2WAY / 4WAY

Unlock Dock Podium

1. Fit the four casters into the base until secure.
2. With the base on its side, fasten the pole on with the included screws, then stand it up.
3. Place on level ground, clear of doorways, with room for a line.

ADDING DOCKS LATER

1. **Open the dock:** back out the tamperproof screws with the L-shaped wrench and lift the faceplate off.
2. **Fasten:** pass an M5 bolt through each backplate hole into the stand.
3. **Close up:** refit the faceplate with the tamperproof screws.

Adding a cover? Follow the cover steps to fasten it onto the box.